



Frame grabbers

Matrox Vio >>

Family of HD/SD analog/digital¹ video capture/display^{2,3,4} boards.



Key features

- > x4 PCIe™ short card
- > analog HD/SD input and output^{2,3,4}
- > HD/SD SDI input and output^{1,2,3,4}
- > low-latency video output
- > video output synchronized to video input
- > 20-bit video quality throughout⁵
- > video source presence detection
- > graphics overlay composition
- > simultaneous digital and analog output^{1,4}
- > available software is sold separately and includes Matrox Imaging Library (MIL)/ActiveMIL and MIL-Lite/Active MIL-Lite
- > supports Microsoft® Windows® XP and Linux⁶

No longer just for broadcast

The Matrox Vio is a family of video capture and display^{2,3,4} boards delivering the superior quality and definition of state-of-the-art broadcast video to medical imaging and high-end video surveillance. A versatile design enables Matrox Vio family to handle new high definition (HD) and traditional standard definition (SD) broadcast video formats transmitted over Serial Digital Interface (SDI) or analog form. In addition to video capture and display^{2,3,4} the Matrox Vio family provides graphics overlay capabilities and the ability to stream high-definition video to/from the host PC through a four lane (x4) PCI Express® (PCIe™) interface.

HD/SD analog/digital video capture


Members of the Matrox Vio family are capable of capturing standard definition (i.e., NTSC/PAL) or high definition (i.e., 720p/1080i) video signals³ in either analog form (i.e., CVBS, Y/C, YPbPr or RGB) with the Matrox Vio Analog or analog or digital (i.e., SDI) form with the Matrox Vio Duo making them an ideal solution for system configurations that must be made to handle both new cutting-edge and legacy video probes and cameras.

All color acquisition is performed with 20-bit accuracy⁵, which helps to expose the subtle details in an image. In addition, all members of the Matrox Vio family are able to detect the presence (or absence) of a video source and can be made to display a custom attention (i.e., “splash”) screen to alert the operator in the event of a video input malfunction.

The Matrox Vio family can output standard definition (i.e., NTSC/PAL) or high definition (i.e., 720p/1080i) video signals³ in analog form (i.e., CVBS, Y/C, YPbPr or RGB) with the Matrox Vio Analog or both analog and digital (i.e., SDI) form with the Matrox Vio Duo enabling it to connect to both new cutting-edge and legacy video monitors and recorders. 20-bit color fidelity⁵ is maintained from input to output, preserving subtle image details. The video output is synchronized to the video input, which eliminates tearing artifacts. Moreover, the video input to output circuitry is designed for low-latency providing the operator with immediate visual feedback. Video outputs on the Matrox Vio family can also be used for playback of archived video. Furthermore, the Matrox Vio family handles the application of graphics overlay (e.g., annotations), generated by the host PC, to the video output in live or playback operation (see insert).




»» Matrox Vio family

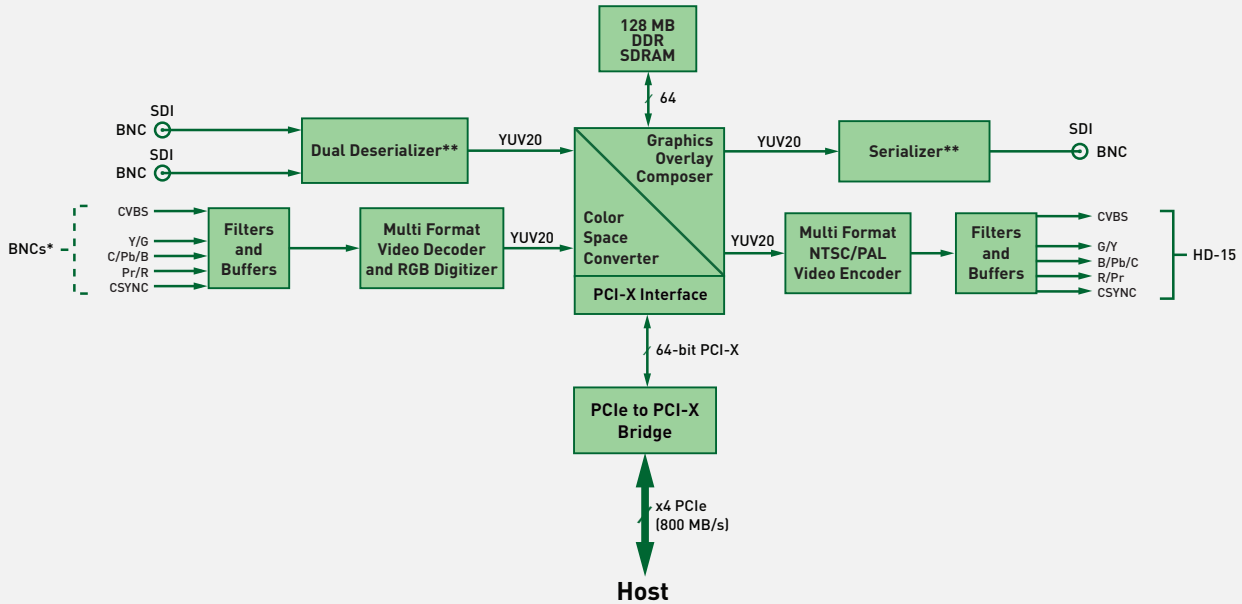

* Present on separate bracket
 ** Present only on Matrox Vio Duo

»» Applying graphics overlay to the live video output

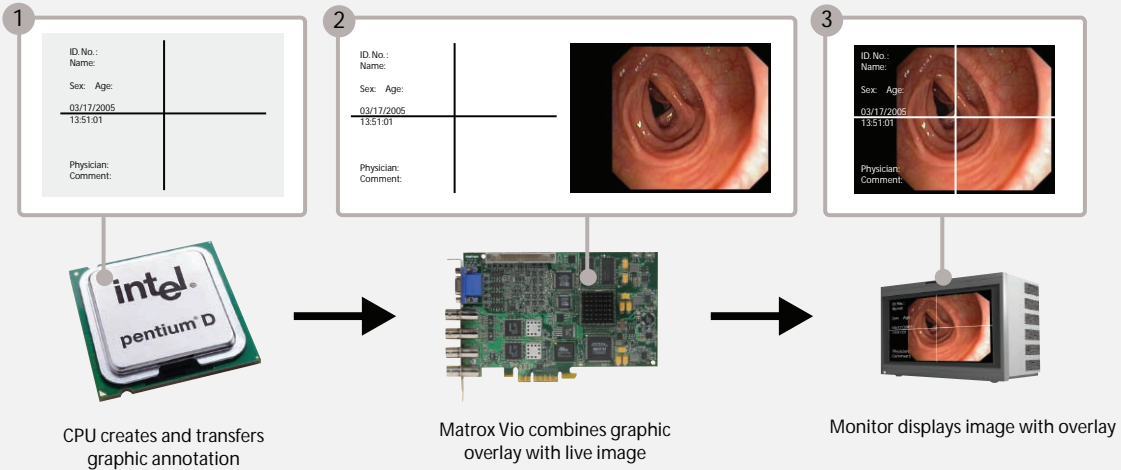

Software

Software support is available for Windows® XP and Linux⁶, and consists of Matrox Imaging Library (MIL)/ActiveMIL or MIL-Lite/ActiveMIL-Lite development toolkits for creating custom applications.

Specifications

Hardware

- x4 PCIe™ short card
- 128MB DDR SDRAM shared memory
- analog or digital¹ (SDI) video acquisition
- simultaneous analog and digital (SDI) video output^{1,3}
- video output synchronized to video input
- HD/SD analog input/output^{2,3,4}
 - 1080i at 60/50 fields/sec
 - 720p at 60/50/30/25/24 frames/sec
 - NTSC/PAL
 - CVBS (NTSC/PAL only), Y/C (NTSC/PAL only), YPbPr and RGB (sync. on G or separate sync.)
 - CCIR-601 or square pixel digitization and display
- HD/SD SDI input/output^{1,2,3,4}
 - 1080i at 60/50 fields/sec (SMPTE 292M)
 - 720p at 60/50/30/25/24 frames/sec (SMPTE 296M)
 - 480i at 60 fields/sec and 480p at 60 frames/sec (SMPTE 259M)
 - 576i at 50 fields/sec
 - connect and switch between two inputs
- 20-bit (YUV20) input and output accuracy
- video output composition (graphics overlay on top of actual video)
- connectors
 - BNCs for SDI inputs and output
 - HD-15s for analog input (on separate bracket) and output

Dimensions and environmental information

- 16.3 cm x 10.7 cm (6.4" x 4.2") from bottom edge of goldfinger to top edge of board and without bracket
- operating temperature: 0 C to 55 C (32 F to 131 F)
- power consumption (typical): 2.48A @ 3.3V, 0.73A @ 12V or 16.94W total
- relative humidity: up to 95% (non-condensing)
- FCC class A
- CE class A
- RoHS-compliant

Software Environment

- host driver for Microsoft® Windows® XP and Linux⁶
- programmed under Microsoft® Windows® using MIL/MIL-Lite (.NET DLLs) with Microsoft Visual C++ (.NET)
- programmed using ActiveMIL/ActiveMIL-Lite (ActiveX controls) with Microsoft® Visual Basic® .NET or Visual C++® .NET
- programmed under Linux⁶ using MIL/MIL-Lite with GNU Compiler Collection (GCC)

Ordering Information

Hardware

Part number	Description
VIO 7 IA OA	Matrox Vio Analog HD/SD analog video capture and display board for x4 PCIe™ with 128 MB DDR SDRAM.
VIO 7 ISA OSA	Matrox Vio Duo HD/SD SDI/analog video capture and display board for x4 PCIe™ with 128 MB DDR SDRAM.

Software

Part number	Description
MIL LITE 8 WIN	MIL-Lite board control library for Microsoft® Windows® XP (see MIL-Lite brochure for more details).
MIL 8 WIN P or U	Matrox Imaging Library (MIL) for Microsoft® Windows® XP (see MIL brochure for more details).
MIL LITE 8 LNX ⁶	MIL-Lite board control library for Linux (see MIL-Lite brochure for more details).
MIL 8 LNX U ⁶	Matrox Imaging Library (MIL) for Linux (see MIL brochure for more details).

Notes:

1. Present only on Matrox Vio Duo.
2. Still requires the presence of a primary display adaptor. Cannot be used to display operating system's desktop.
3. No support for audio channel.
4. No support for transcoding (i.e., video output resolution and rate is identical to video input resolution and rate).
5. YUV20 format.
6. Contact local representative or Matrox Imaging Sales for availability.

Corporate headquarters:

Canada and U.S.A.
Matrox Electronic Systems Ltd.
1055 St. Regis Blvd.
Dorval, Quebec H9P 2T4
Canada
Tel: +1 (514) 685-2630
Fax: +1 (514) 822-6273

**For more information, please call: 1-800-804-6243 (toll free in North America) or (514) 822-6020
or e-mail: imaging.info@matrox.com or <http://www.matrox.com/imaging>**

matrox[®]

All trademarks by their respective owners are hereby acknowledged. Matrox Electronic Systems, Ltd. reserves the right to make changes in specifications at any time and without notice. The information furnished by Matrox Electronic Systems, Ltd. is believed to be accurate and reliable. However, no responsibility license is granted under any patents or patent rights of Matrox Electronic Systems, Ltd. Windows and Microsoft are trademarks of Microsoft Corporation. Printed in Canada, 2009-06-11. **5IE-5387-B**